




Pneumatic Jack

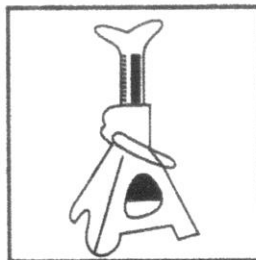

Weight must be supported by a set of jack stands rated at the proper capacity before any work or inspection can be done on vehicle. Do not exceed the rated capacity or loss of load may occur.

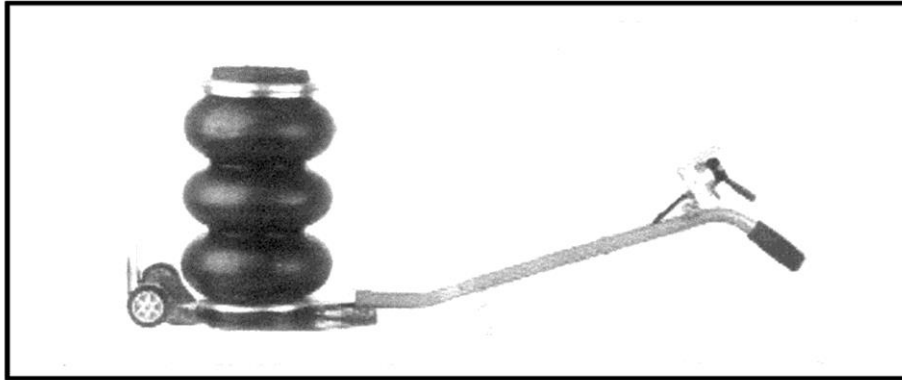


Always firmly apply parking brake.

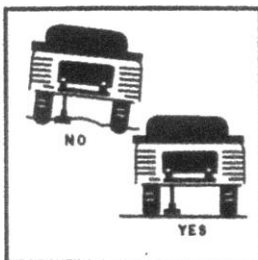

This jack is designed for use on hard, level surfaces only. Use on uneven or unstable surfaces could result in instability and possible failure to support load.



Place wheel chocks at the front and rear of the tires that will not be lifted before proceeding.

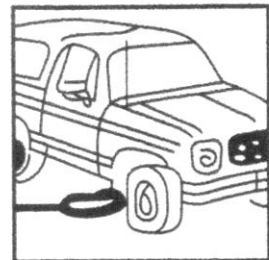

Always center the jack under the axle or a flat reinforced frame surface.

IMPORTANT: Please read these instructions carefully before using your jack. Proper use and care of the jack will be helpful to assure you of continuous safe trouble-free problems.


Matters needing attention:

1. This lifting jack is only used in the process of rising and falling, and if to support the cart, please use the safety stands. This product can only be used for the skirt part of the car.
2. Please used in the relatively level, solid ground.
3. Please place a triangle block under the car dependency wheel.
4. The normal operating pressure is in the range of 5——10kg/cm² .
5. Compressed air should be clean and contain no water.
6. There is no need to raise the balloon to the maximum, as long as to the desired height (such as to cram off the ground), that is to say, to close the ball value switch, to stop gas supply, to cram the safety bracket, and then to work.
7. Remember that if the balloon rises to the maximum (Stop to rise), immediately shut off the valve switch, stop gas supply.
8. When used, the jack should take a position outside of center for 10- 20cm, that is, Jack should be put under the car just a little.
9. The safety value has been set as 10kg/cm² . If being exceeded, the pressure will be automatically discouraged. If it doesn't work, please correct it again.
10. When not in use, it should be placed indoor and mustn't be placed outdoor. And please use the supplied accessories.
11. It is strictly prohibited to disassemble the jack balloon subject; otherwise there will be consequence to bear. At the same time, the manufacturer is not responsible for the after-sale service.

Instructions for use:

When inflated, the jack ride, and vice-verse.

1.To control the switch in the rod back, to insert the compressed air in the right gas nozzle, and close the left switch.

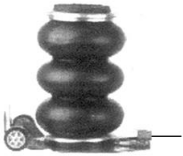

Main body




Connecting rod 1



Connecting rod 2

2. Open the right ball value switch, and when the gasbag rises, it can be used.

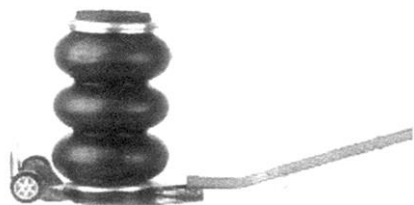

3. To fall the jack, please open the left switch.



Installation instructions:

1.The tracheal passes through the connecting rod 1, and rod 1 is fixed on a bottom plate with four nut bolts.

2.Firstly pass the tracheal tube through the connecting rod 2, and sheath the pneumatic connector nut in the pipe port; secondly insert the tracheal tube into the

pneumatic lay-up of the controls, and tighten the nuts(do not use excessive force);
finally , connect the spindles with bolts.